Converter Assembly

NOTE:

Install Converter into Coupling using Fixed Pin Spanner Wrench (w/ 3/16" pins x 1" circle McMaster Carr #5480A11) and applying HEROIC Effort

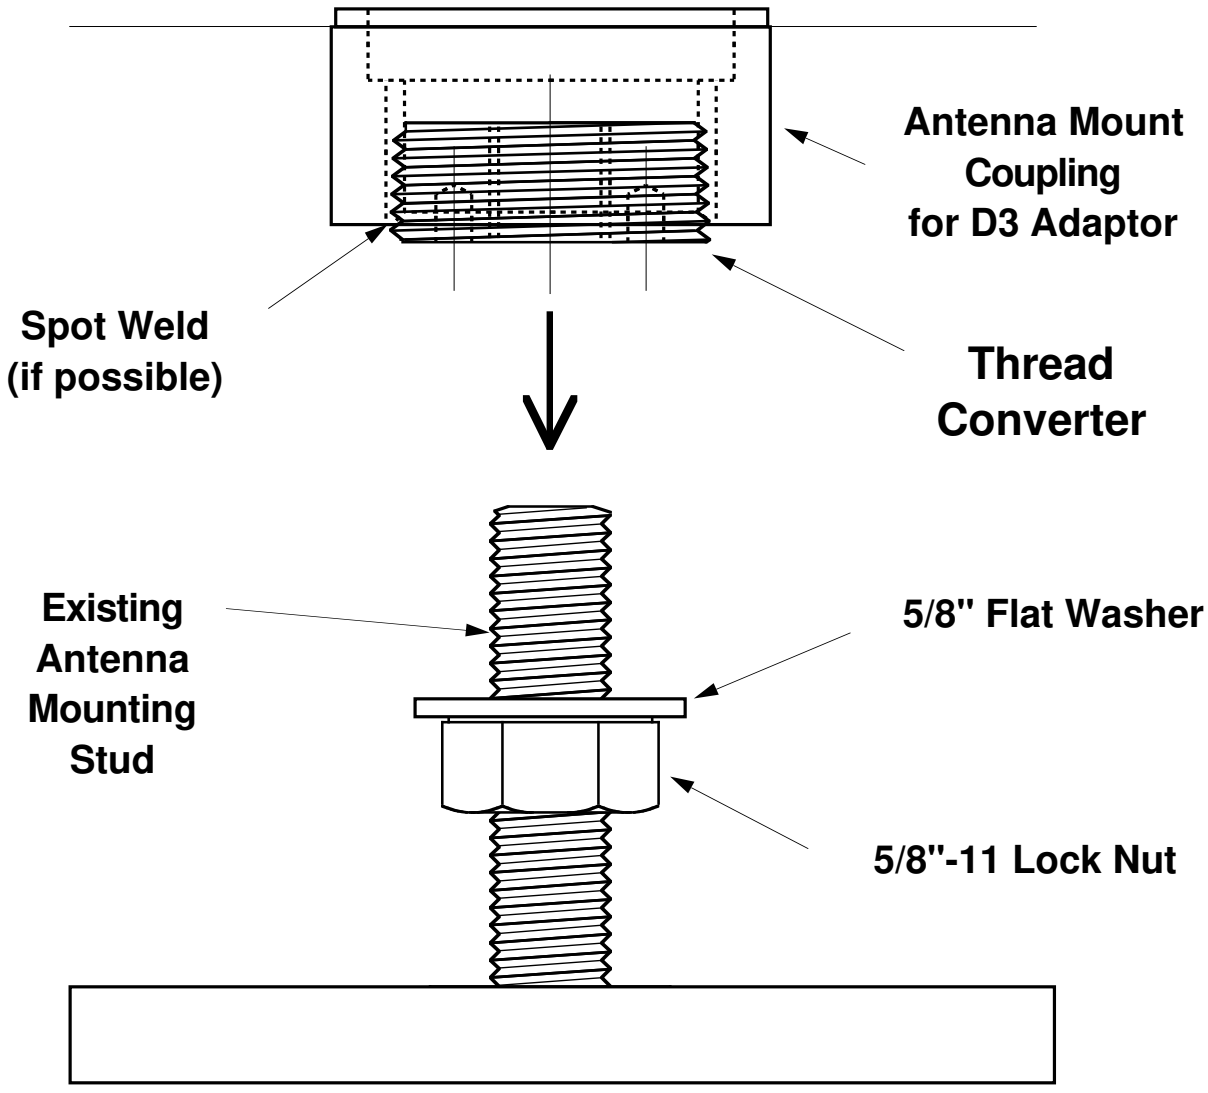

University of California IGPP 0225 La Jolla, California 92093 **DESIGN 3 GPS Ant. Mount**		Tolerances +/- (unless specified) x/x .x .xx .xxx angular 1/64" .1" .01" .005" 1deg TITLE **Converter Assembly**
DRAWN BY CBH	DATE 24 Jun 99	DRAWING NUMBER **AD3-106**
Do Not Scale This Drawing	SCALE 1" = 1"	